



### **Easy Maintenance and Care Tips for Your Tent:**

- Never store tent when wet or damp
- Store tent above ground level
- Wash off dirt and grime with a mild soap solution before storing
- Periodically air tents whilst in storage
- Ensure that pegs and frames are packed in a separate bag to avoid damages
- Use a good quality ground sheet (see our wide Product Range under Ground Sheets)

### **Camping Tips:**

- It is advisable to carry a wax stick as a make-shift patch for leaks in your tent (for permanent repairs, contact us for a quote)
- If your camping zipper becomes stuck, do not use an oily lubricant to loosen the tent zipper, instead, use a bar of soap
- Include a small repair kit consisting of nylon thread and a needle, duct tape and extra snaps to connect to the tent pole
- Avoid camp fires close to the tent
- It is advisable to count peg/guy ropes and poles when unpacking and again when packing up
- Before leaving the campsite do a final check to ensure that all items are packed